



CLOCKWORK
COMPONENTS

How To Measure

OKE5007-140/170

Where to measure



CLOCKWORK
COMPONENTS

CLOCKWORK COMPONENTS LTD.
T : 01993 775 767 F : 01993 892 313 E: sales@clockworkcomponents.com
www.clockworkcomponents.com

Aug 2022

All images, photos, text and designs are protected by copyright and may be subject to additional Design Right Protection