



CLOCKWORK  
COMPONENTS

## How To Measure

PF0001


PF0002

PF0004

PF0005

PF0007

PF0035

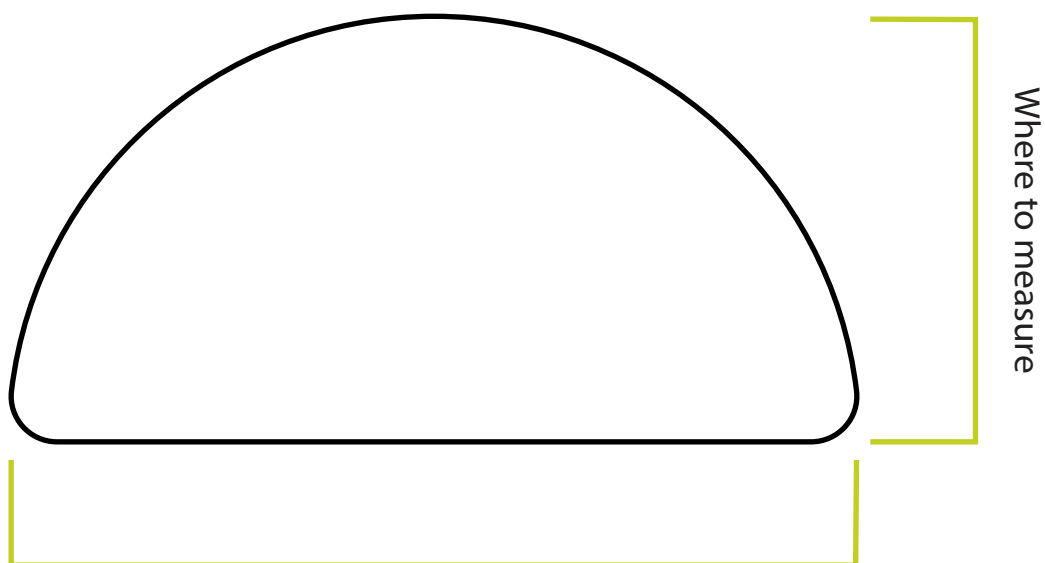

Where to measure