



CLOCKWORK
COMPONENTS

How To Measure

NWER01

NWER012

NWER034

OKE5009-180/200/250

OKE5010-190

OKE1445-149/909

OKE1447-508


OKE5509-000

PF0012

PF0034

WPP005/011/014-S/017-S

Where to measure

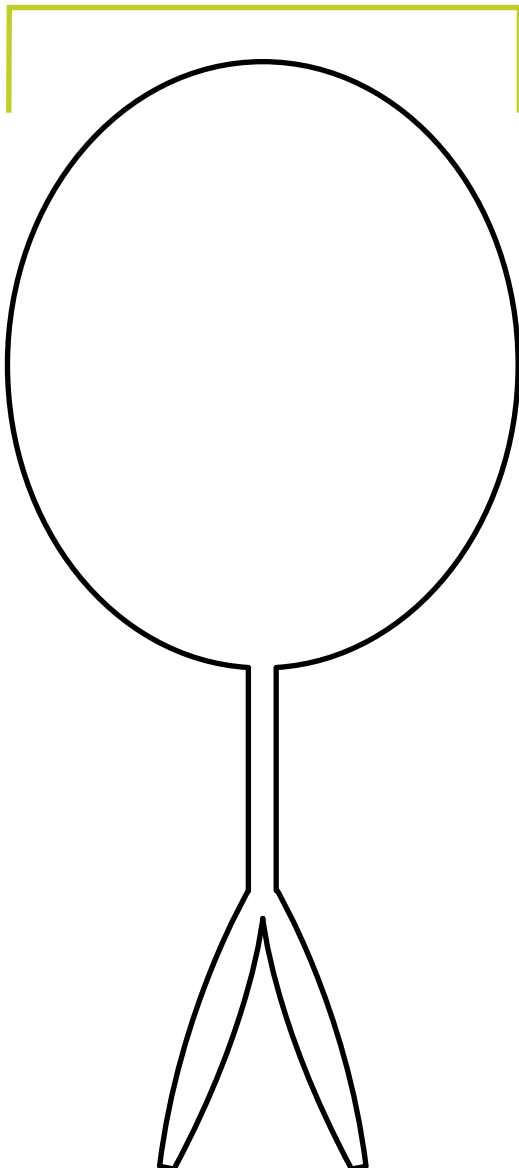

CLOCKWORK
COMPONENTS

CLOCKWORK COMPONENTS LTD.

T : 01993 775 767 F : 01993 892 313 E: sales@clockworkcomponents.com
www.clockworkcomponents.com

Aug 2022

All images, photos, text and designs are protected by copyright and may be subject to additional Design Right Protection