







Gast Strut GST 245 100N Fixing Details

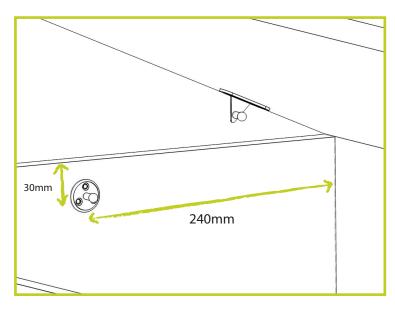

The inside fixing should be placed 30mm down from the edge and 240mm from the back of the box.

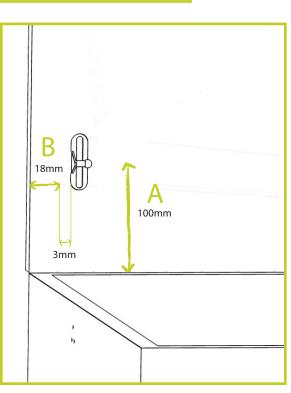

Measurement B:

The fixing should be placed 3mm from the near side edge (plus wood thickness). In this example, the wood is 18mm thick, making the total distance from the edge 21mm.



