



Welcome to OKE

Your partner for plastic components

Clip Profile + TieDown

2040 + 3604



Secure the clip profile to the wood using staples.



Sew the TieDown onto the fabric and then insert it onto the receiver profile.



The fabric should be pulled over the desired area.



You can adjust the fabric!



Clipfix + Tiedown

4370 + 3604




The two pieces of fabric should be sewn together.



The tiedown should then be sewn onto the fabric.



The next step is to staple the Clipfix onto the woodframe.

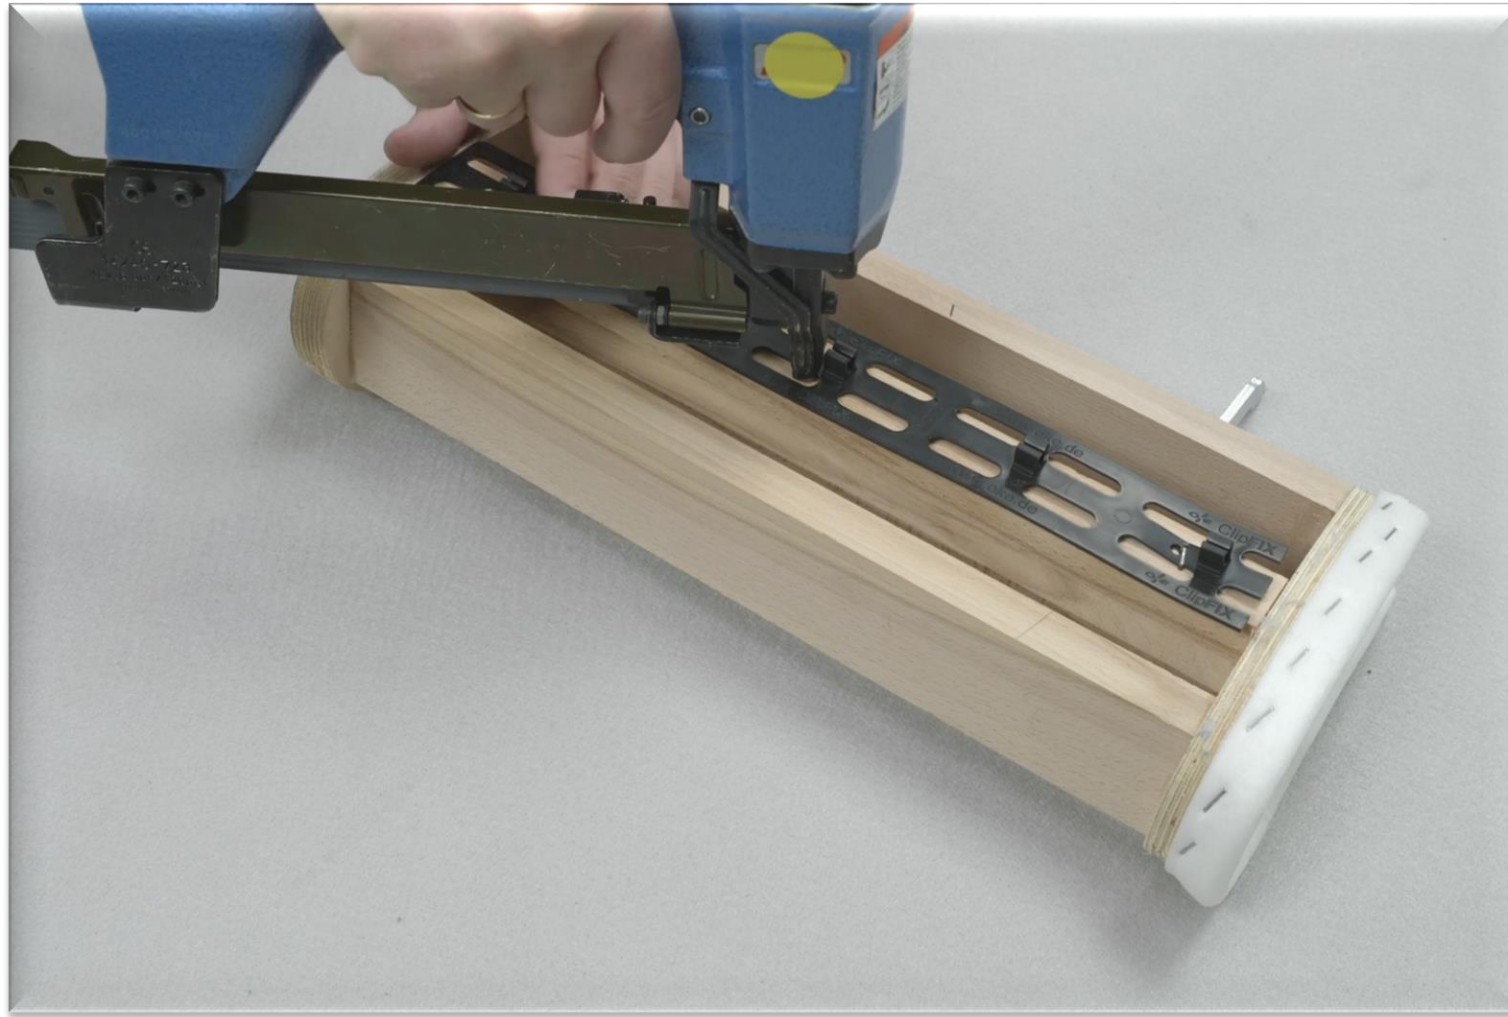

Please ensure that the tie-down is securely fastened to the clip-fix.



Here's the final result:





OKE Kunststofftechnik GmbH & Co.KG
Nobelstraße 7 / 48477 Hörstel / GERMANY

Mónica Pertegaz
T 0034 670 386263
Monica.Pertegaz@oke.de
oke-group.com