



Welcome to OKE



Your partner for plastic components

Dowel


4247



Step 1: Stick the dowel through the hole of the wood-piece you want to attach to the upholstery.

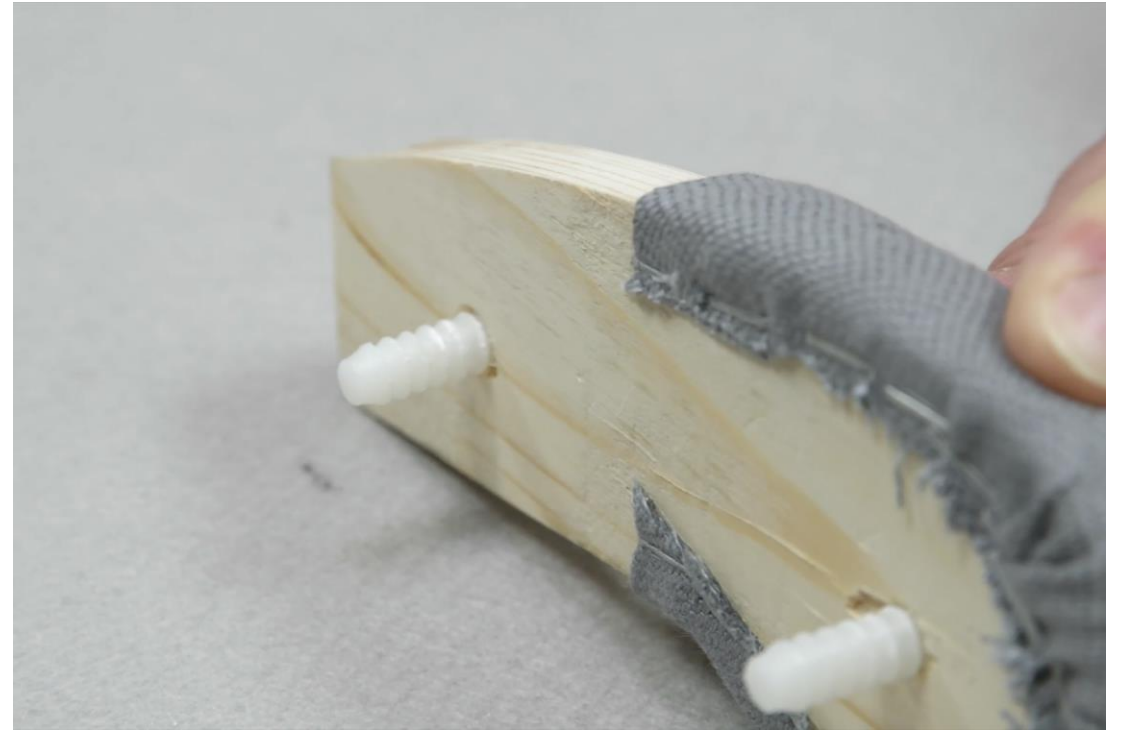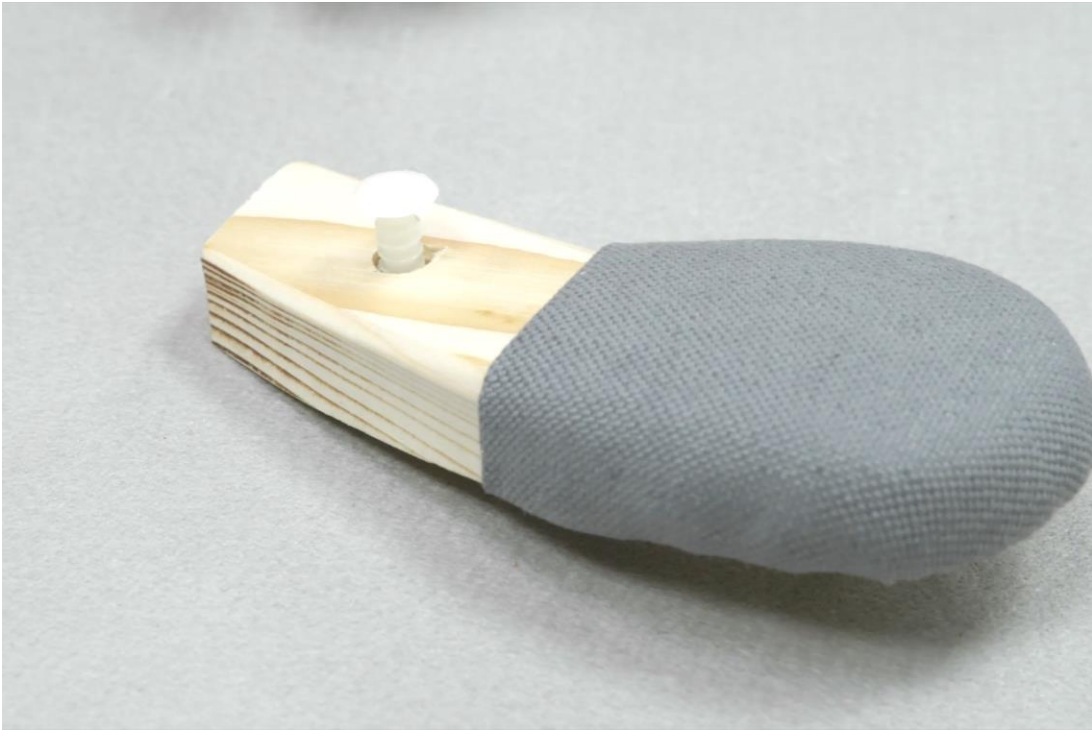

Step 2: Prepare the upholstery piece with holes where the dowel can be put into.

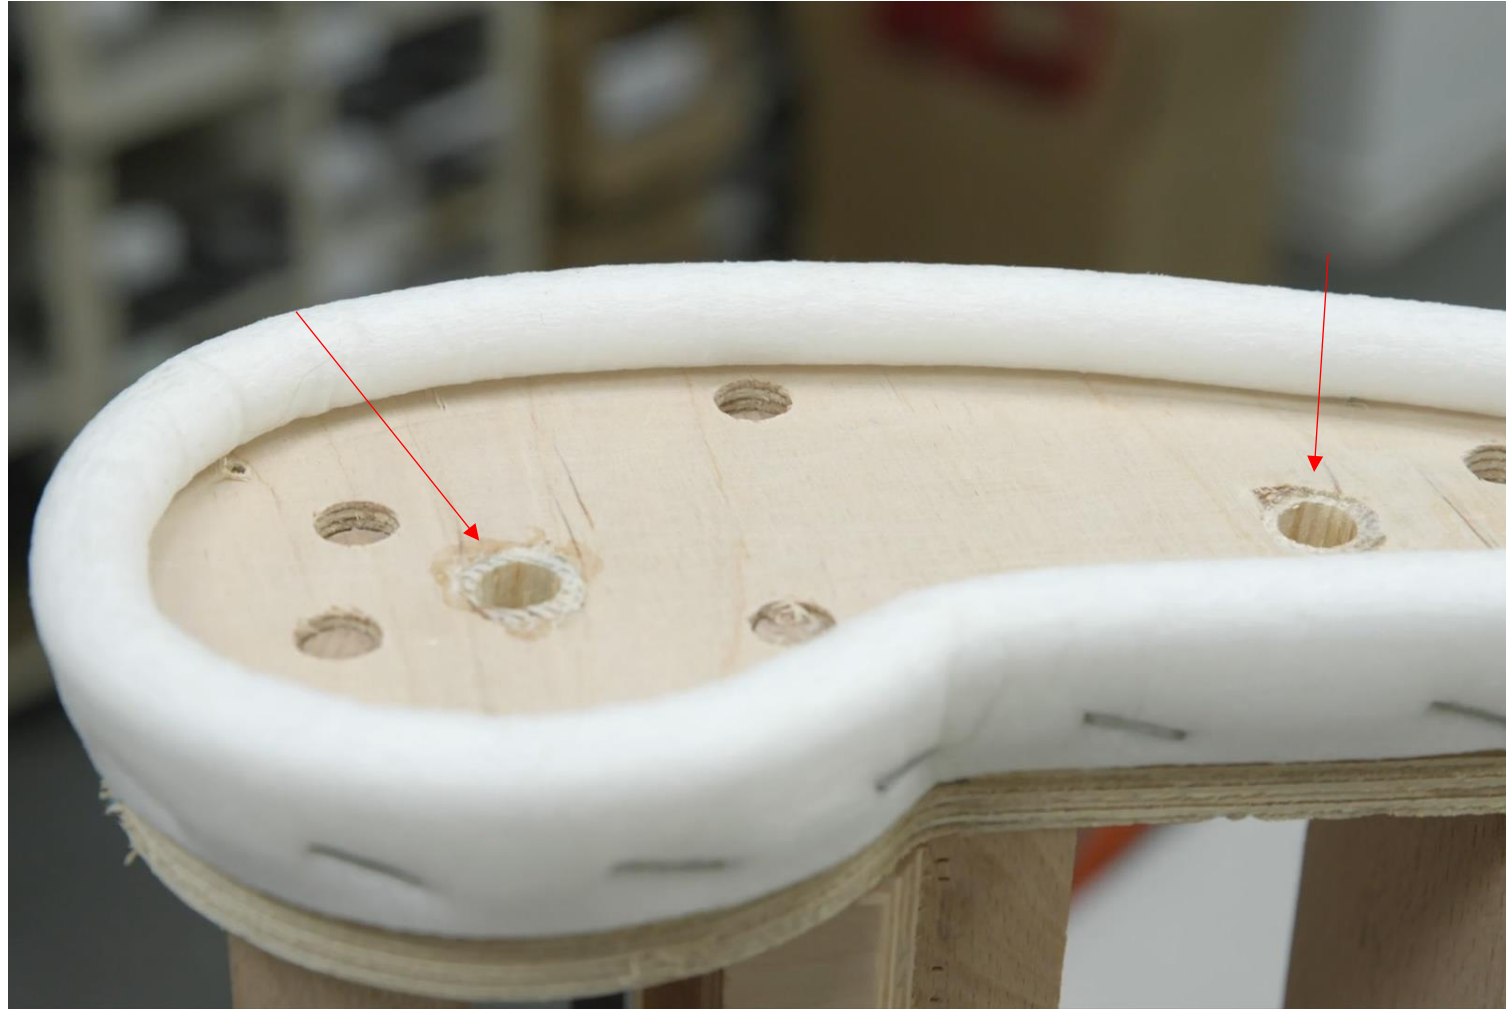

Step 3: Place the dowel above the holes and push them in using a hammer.



Final result:





OKE Kunststofftechnik GmbH & Co.KG
Nobelstraße 7 / 48477 Hörstel / GERMANY

Mónica Pertegaz
T +49 5459 914-200
M +34 670 386263
Monica.Pertegaz@oke.de
oke-group.com